PUNCH CARD PATTERNS (Card Nos. 401-410)

LACE PATTERNS

BIG & BOLD DESIGN

PUNCH CARDS SET VOL. 5

LACE PATTERNS (Big & Bold design)

Happy knitting with a better knitter!

We have produced a most technically advanced, automated punch card type knitting machine. Since the newly marketed kniter is designed for automatic punch card knitting with 24 needles selection system, "Big and Bold" designs can be knit without any difficulty.

Look at the stitch patterns, and choose your favorit pattern card. Any designs can be knit easily-joyfully.

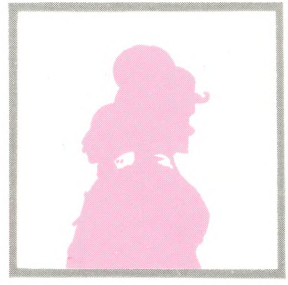

Note :

Before using this Punch cards, please read instruction manual.

SETTING THE PUNCH CARD

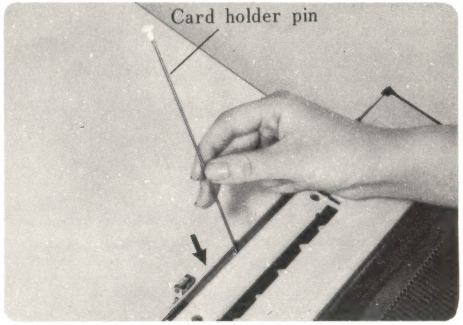

(1)Insert the Punch card holder pin in the hole at the back of the knitter.

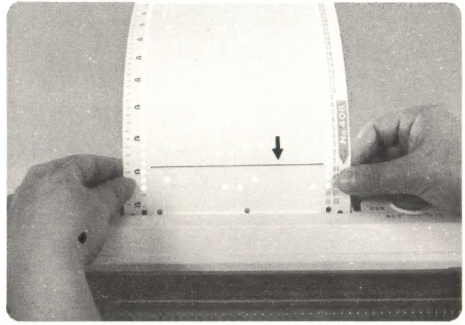

(2)Insert the Punch card into the slit with the number facing you.

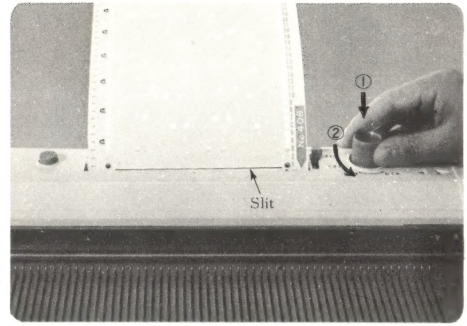

(3)Make sure the Starting line is parallel to the panel. Press down the Feeding knob and turn to left (to FEED) to feed the Punch card.
* It is easier to turn the Feeding knob by pressing down the Push button at the same time.

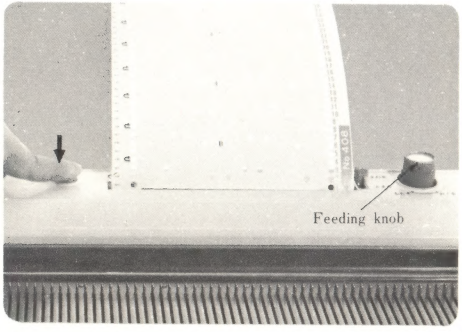

(4)Connect both ends of card with special plastic snaps.

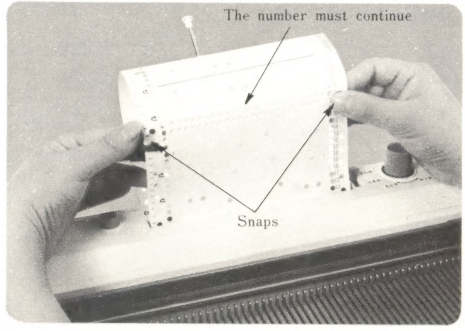

(5)Turn the Feeding knob and set to the Starting position. Set the Card lock lever to the "●" mark.

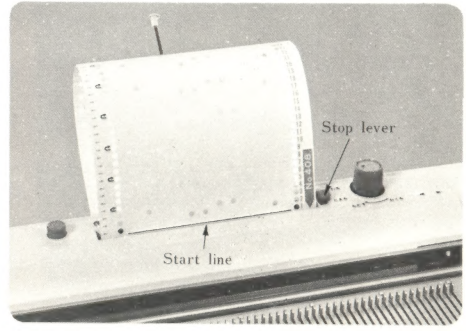

NOTE: The tension number (Tension No.) indicated under the picture is the number of the Tension dial. The tension differs for each type of yarn, therefore this number can be used only as a guide.

PREPARATION OF LACE PATTERN KNITTING

* Prepare various systems according to the following steps when you knit using the Punch card.

(1) After knitting several rows with PLAIN, place the K carriage on the right end of the needle bed.

(2) Set the desired Punch card to the Starting position.

(3) Set the Change knob to position "N. L" for Lace knitting.

(4) Set the Card lock lever to the "●" mark.

(5) Place the L carriage on the extension rail of left side correctly.

(6) Move the L carriage from left to right. So, the corresponding needles are brought to position D.

(7) Set the Card lock lever to the "▼" mark.

* Continue the knitting according to the direction of arrows on the left side of the card.
* In the event that an end needle is brought forward it should be pushed back by hand to position B before operating the L carriage.
* Hang the Claw weights onto the Cast-on comb.

ARROWS ON THE LACE KNITTING CARDS

* You will find the following arrow marks on the left side of the lace knitting punch cards.
* The left red arrow means direction of L carriage.

  ➡ ……Move the L carriage from left to right.

  ⬅ ……Move the L carriage from right to left.
* The right blue arrow means direction of K carriage.

  ⮌ ……Move the K carriage from right to left and come back to right.(Knit two rows.)
* When the arrows ➡ and ⮌ are indicated at the same step, first move the K carriage, then operate the L carriage.
* The Punch card is not fed by the K carriage movement in lace pattern knitting, therefore, you can alter the pattern by changing the operation times of the K carriage.

No 1

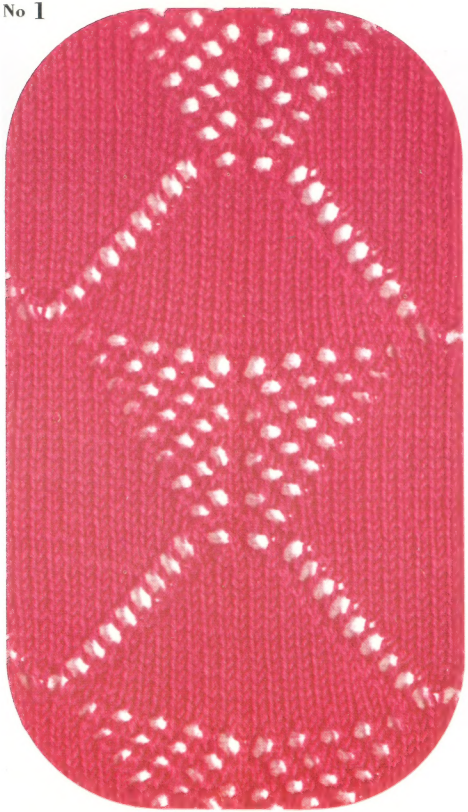

Card No.410 24sts., 36rows : 1pattern
Tension No.5

No 2

Card No.410 24sts., 48rows : 1pattern
Tension No.4
* Knit 8 rows each with PLAIN at the step Nos. 36 and 72.

No 3

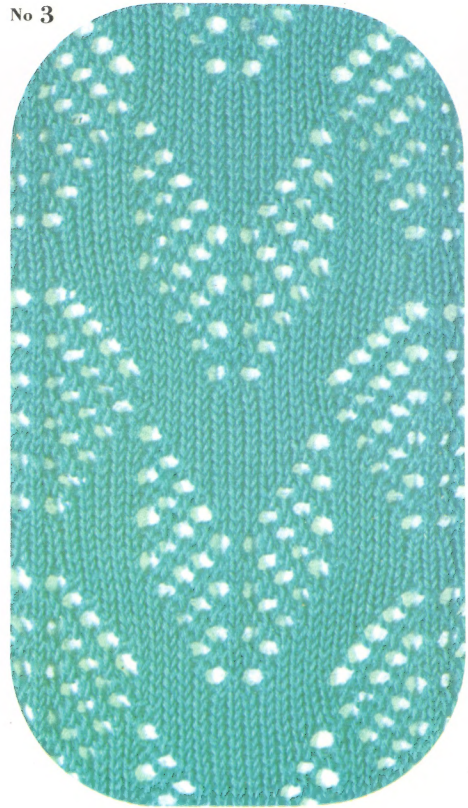

Card No.406 24sts., 28rows : 1pattern
Tension No.5

No 4

Card No.406 24sts., 36rows : 1pattern
Tension No.4
* Knit 4 rows each with PLAIN at the step Nos. 16, 28, 44 and 56.

No 5

Card No.405 24sts., 16rows : 1pattern
Tension No.4

No 6

Card No.405 24sts., 24rows : 1pattern
Tension No.4
* Knit 6 rows each with PLAIN at the step Nos. 28 and 56.

No 7

Card No.404 24sts., 16rows : 1pattern
Tension No.5

No 8

Card No.404 24sts., 24rows : 1pattern
Tension No.4
* Knit 6 rows each with PLAIN at the step Nos. 28 and 56.

No 9

Card No.408 24sts., 32rows : 1pattern
Tension No.5

No 10

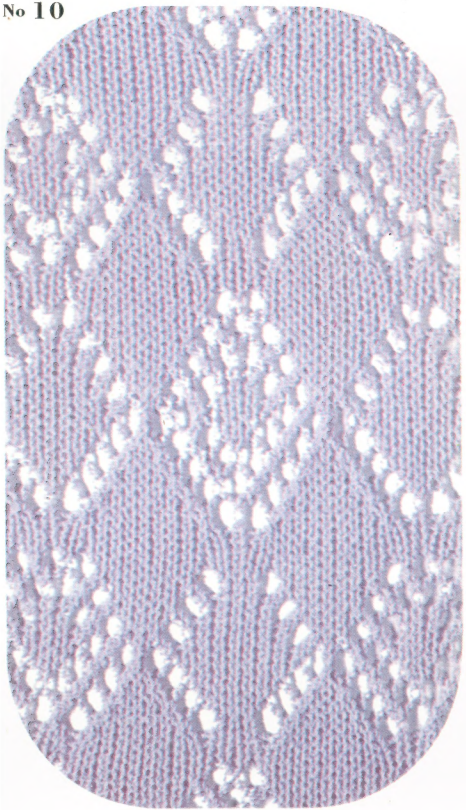

Card No.408 24sts., 40rows : 1pattern
Tension No.4
* Knit 6 rows each with PLAIN at the stop Nos. 36 and 64.

No 11

Card No.409 12sts., 20rows : 1pattern
Tension No.5

No 12

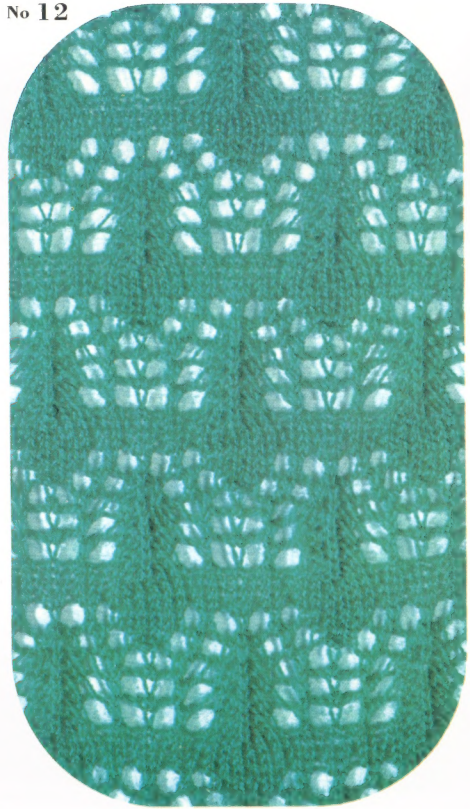

Card No.409 12sts., 24rows : 1pattern
Tension No.4
* Knit 6 rows each with PLAIN at the step Nos. 34 and 68.

No 13

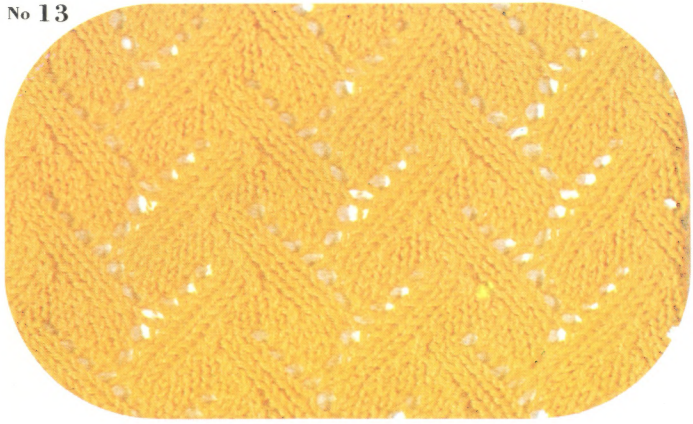

Card No.402 12sts., 12rows : 1pattern
Tension No.4

No 14

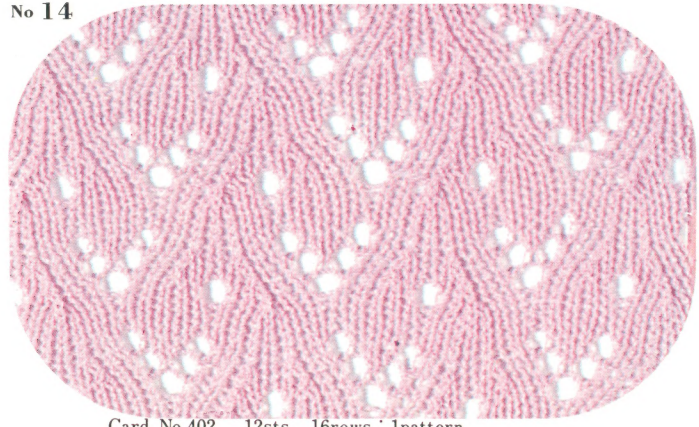

Card No.402 12sts., 16rows : 1pattern
Tension No.4
* Knit 6 rows each with PLAIN at the step Nos. 24 and 48.

No 15

Card No.407 24sts., 16rows : 1pattern
Tension No.4

No 16

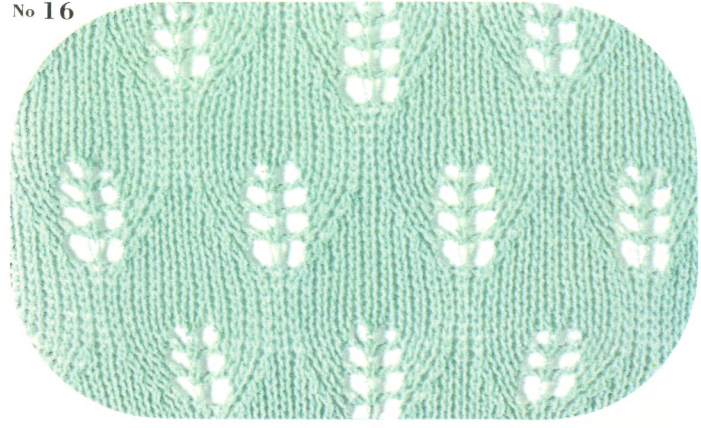

Card No.407 24sts., 28rows : 1pattern
Tension No.4
* Knit 8 rows each with PLAIN at the step Nos. 28 and 56.

No 17

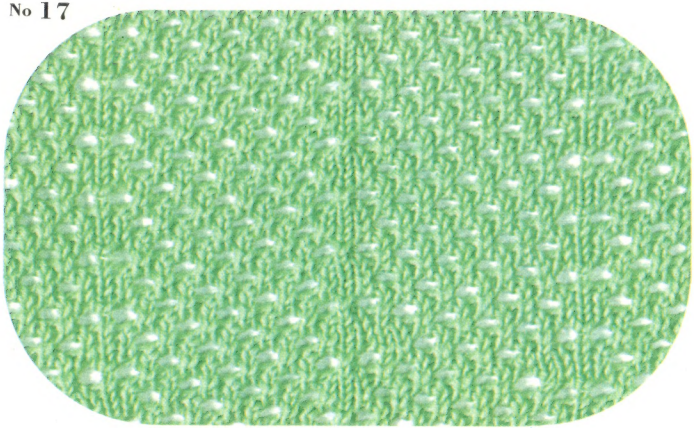

Card No.403 24sts., 6rows : 1pattern
Tension No.5

No 18

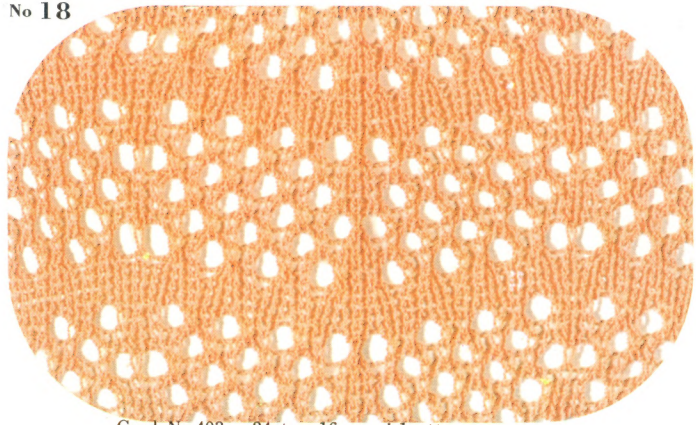

Card No.403 24sts., 16rows : 1pattern
Tension No.4
* Knit 6 rows each with PLAIN at the step Nos. 24 and 48.

No 19

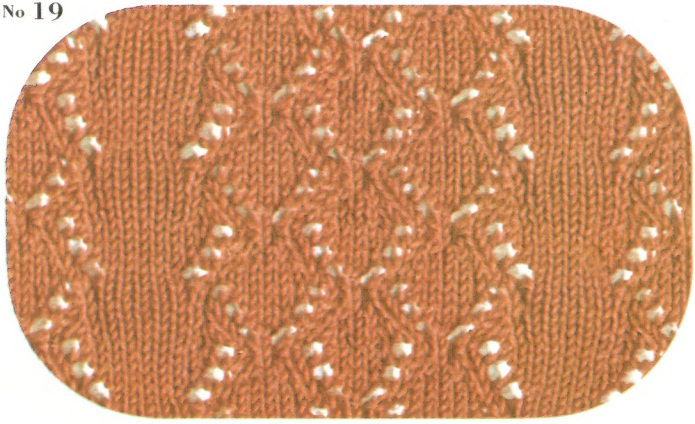

Card No.401 24sts., 12rows : 1pattern
Tension No.5

No 20

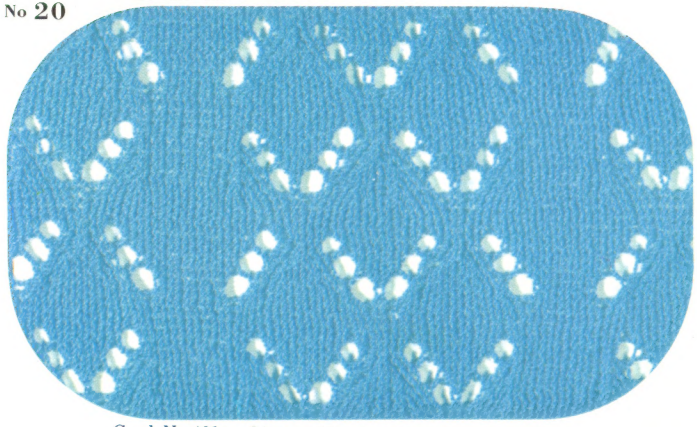

Card No.401 24sts., 20rows : 1pattern
Tension No.4
* Knit 6 rows each with PLAIN at the step Nos. 20 and 36.

486366001 Printed in Japan